600mm slimline cabinet







equipment required

- · Cordless drill
- Drill bits:
 No 2 screw tip, 4mm bit, No 12 countersinking bit
- 65mm wood screw
- Wall fixing (only if fixing cabinet to wall)
- Tape measure
- · Adjustable square
- Spirit level
- · Quick release clamps
- · Cabinet supports
- Pencil
- Safety gear:
 Safety glasses, ear muffs, dust mask


important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length.
 However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started




step 1

cabinet assembly

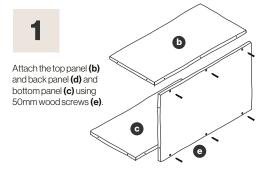


2

Attach the two side panels (a) to the back, top and bottom panels using 50mm wood screws (e).

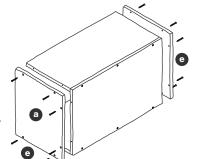

3

Once all sides have been attached, the shell of your cabinet is complete.

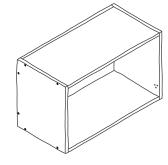

step 2

joining the cabinets and securing to the wall




Using cabinet supports, align the cabinets and hold together using quick release clamps.

Ensure the cabinets are level

Tip: It may be best to align the top of the cabinets with the top of your pantry.


Note: AUS/NZ standards requires a minimum distance of 600mm between burners and the rangehood.

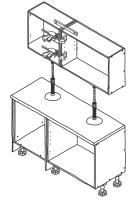

2

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

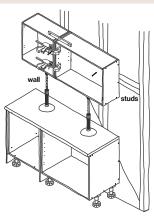

www.trendstyle.com.au

step 2


joining the cabinets continued

step 4

attaching the door


Ensure the timber support rail is leven and install 360mm from the pantry top.

Tip: For ease of installation, ask another person to help hold the cabinet.

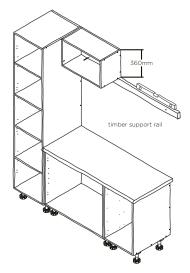


This slimline cabinet can be used in conjuction with pantry end panels as an overhead refrigerator cabinet.

- a. Ensure the cabinet is in alignment with the top of the end panels.
- b. Set the cabinet back from the front of the end panels. 18mm for melamine doors and 20mm for thermoformed doors.
- c. Clamp the panels and cabinet together using quick release clamps.
- d. Pre-drill holes, and attach the cabinet and end panels using wood screws.

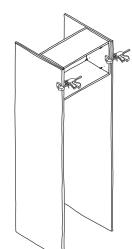


Push on the release tab to remove the hinge from the hinge plate (h).



Attach the hinge plate to the underside of the top of the cabinet, securing with 14mm wood screws (i) ensuring they are screwed through the lugs.

Once the hinge has been adjusted, secure 2 more screws in the round holes in each plate.

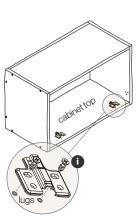

step 4


attaching the door

3


Attach the two hinges (h) to the door using 14mm wood screws (i).

Ensure that the screws are inserted through the lugs.


Once the hinge has been adjusted, secure 2 more screws in the round holes in each plate.

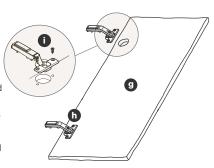

4

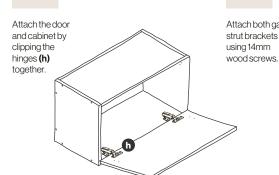

5

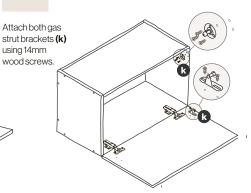

6

Clip the gas strut (j) onto to the two brackets.

Note: If the strut needs adjusting, move the bracket on the door forward or back.

Note: If you need to remove the gas strut, use a flat head screw driver to lift the metal straps on the strut.

